

Analog To Digi Dash Repin

Steps to convert your 2006-07 outlander speedometer to the 2008-12 style.

Clock memory will not be saved unless power is provided to pin 16

Outlander dash plug (wire loom removed for picture taking) There are three tabs that need to be pried open. A pick or small screw driver works well




Tabs are at 9, 12 and 3 o'clock



showing the tab style, clean things before you take this apart this isn't a place for dirt!



2006-2007 Style Wire colors should be similar to what is shown.

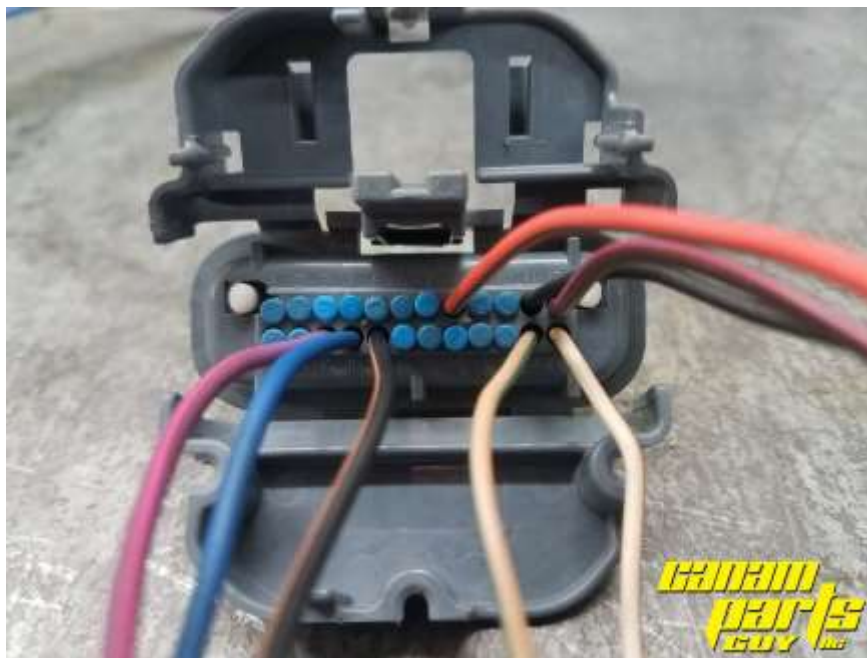

2006-2007 Style Wire colors should be similar to what is shown.



This smoke color guard needs to be removed there are two tabs that need to be depressed for it to slide off.



sliding the smoke colored guard off



Pins exposed



Push the wire in first



using the small screw driver pry up the plastic clip



with the screw driver inserted pull the wire out.



process is repeated for the rest of the wires



You are left with these blue fillers, these will need to be arranged differently for the new style dash.



They simply pull out, a little pry with the screw driver will get them out.




2008-12 arrangement



2006-2007		2008-12	
Pin Number	Wire Color	Pin Number	Wire Color
8	Orange/Green	4	Purple/Pink
11	Black	5	Blue
12	Brown/Pink	7	Black/Brown
15	Purple/Pink	17	Orange/Green
16	Blue	18	Tan/Green
17	Black/Brown	19	White/Brown
23	Tan/Green	20	Black
24	White/Brown	21	Brown/Pink



2008-12 wire layout.
The wires are simply inserted you will feel a "click"

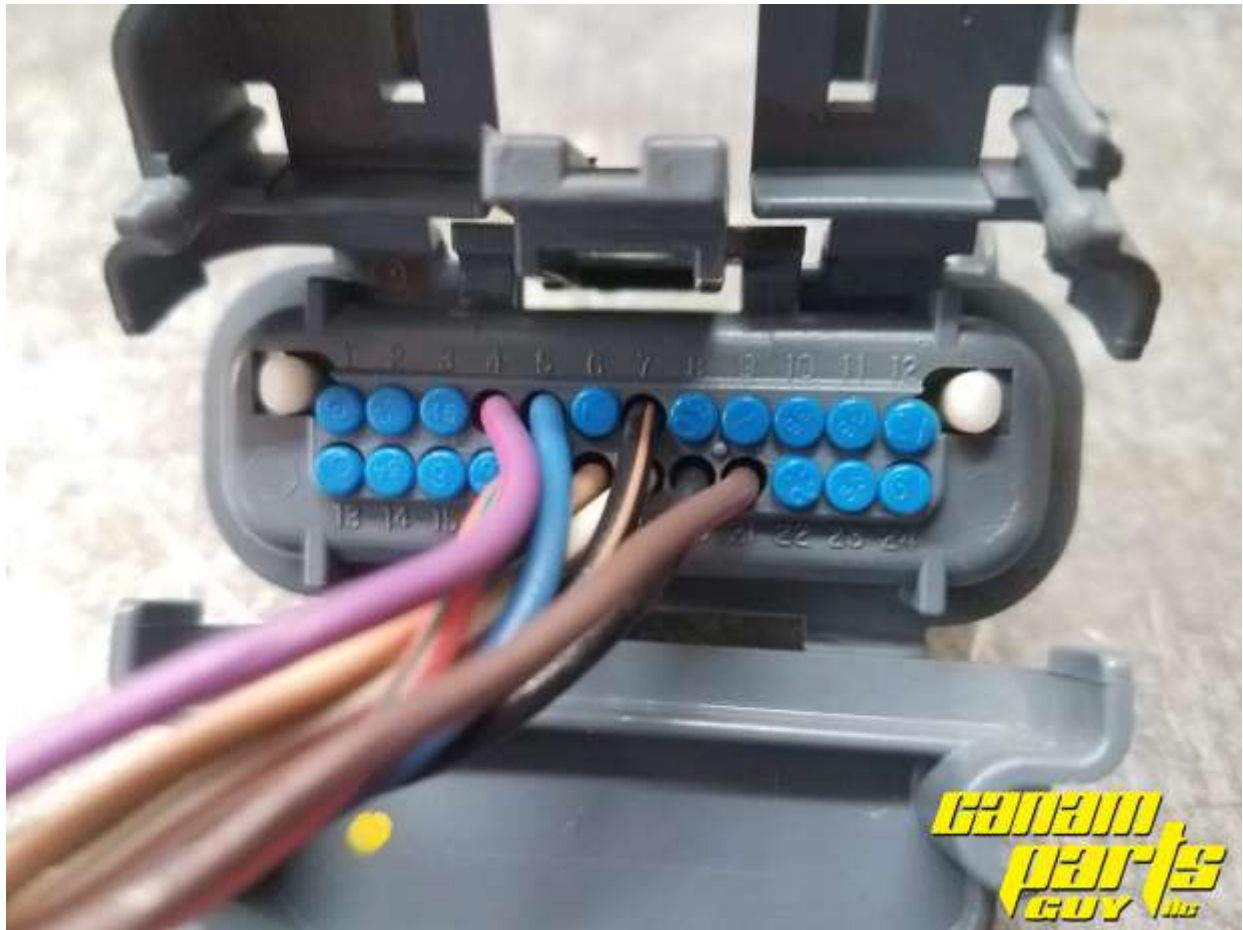

2008-12 wire layout bottom row showing the colors and numbers
Double check your lay out and re assemble the machine, you may have to plug in with BUDS to pair
the new dash with your machine.

